



CÓD.	REF.	INK-JET COLOR	COLOR
96683	4479A002AA	BJC-3000/6000/6100/6200/6200S, i550S400/450S500/520/600/630/750, i560, i560s, i860, i865, PiSMA iP3000, PiXMA iP5000, PiXMA iP4000, PiXMA iP4000R, PiXMA MP780, PiXMA MP750, PiXMA MP760	●
96685	4480A002AA	BJC-3000/6000/6100/6200/6200S, i550S400/450S500/520/600/630/750	●
96686	4481A002AA	BJC-3000/6000/6100/6200/6200S, i550S400/450S500/520/600/630/750	●
96684	4482A002AA	BJC-3000/6000/6100/6200/6200S, i550S400/450S500/520/600/630/750	●
53706	4529B001	PIXMA MG5150/5250, PIXMA MG6150/8150, PIXMA iP4850/6650, PIXMA MG5350/lp4950, PIXMA MG6250/8250, PIXMA MX885	●
53707	4540B001	PIXMA MG5150/5250, PIXMA MG6150/8150, PIXMA iP4850/6650, PIXMA MG5350/lp4950, PIXMA MG6250/8250, PIXMA MX360/410/420	●
53708	4541B001	Pixma IP 4850-4900-4950, Pixma MG 5100-5140-5150-5200-5250-5350-6150-6250-8150-8250, Pixma MX 715-880-885-895, Pixma iX 6500-6550	●
53709	4542B001	PIXMA MG5150/5250, PIXMA MG6150/8150, PIXMA iP4850/6650, PIXMA MG5350/lp4950, PIXMA MG6250/8250, PIXMA MX360/410/420	●
53710	4543B001	PIXMA MG5150/5250, PIXMA MG6150/8150, PIXMA iP4850/6650, PIXMA MG5350/lp4950, PIXMA MG6250/8250, PIXMA MX360/410/420	●
300375	4544B001	PIXMA MG5150-5250-5350-6150-8150-8250	●
94610	4705A002AA	S800/820/900/9000, 950S/965/960x/990, i9950, PIXMA iP8500, PIXMA iP600D, PIXMA iP5000, PIXMA iP4000, PIXMA iP4000R, PIXMA MP780, PIXMA MP750, PIXMA MP760	●
94609	4706A002AA	S800/820/900/9000, 950S/965/960x/990, i9950 • PIXMA iP8500, PIXMA iP600D, i560 • i560s • i860 • i865 • PiSMA iP3000, PiXMA iP5000, PIXMA iP4000, PIXMA iP4000R, PIXMA MP780, PIXMA MP750, PIXMA MP760	●
94608	4707A002AA	S800/820/900/9000, 950S/965/960x/990, i9950 • PIXMA iP8500, PIXMA iP600D, i560 • i560s • i860 • i865 • PiSMA iP3000, PiXMA iP5000, PIXMA iP4000, PIXMA iP4000R, PIXMA MP780, PIXMA MP750, PIXMA MP760	●
94607	4708A002AA	S800/820/900/9000, 950S/965/960x/990, i9950 • PIXMA iP8500, PIXMA iP600D, i560 • i560s • i860 • i865 • PiSMA iP3000, PiXMA iP5000, PIXMA iP4000, PIXMA iP4000R, PIXMA MP780, PIXMA MP750, PIXMA MP760	●
75586	5222B004	PIXMA MG2150/3150	●
58333	5226B004	PIXMA MG2150/3150	●●●
153673	5227B005	PIXMA MG2150 / 3150 / 3510 / 3550 / 3650 / 4250 / MX395 / 475 / 525 / 535 / TS5150 / 5151	●●●
154130	6384B001	PIXMA PRO-100 / 100S	●
154129	6384B010	PIXMA PRO-100 / 100S (MULTIPACK 8 COLORES BK / GY / LGY / C / M / Y / PC / PM 13 ML)	●●●●●●●
154131	6385B001	PIXMA PRO-100 / 100S	●●●
154133	6386B001	PIXMA PRO-100 / 100S	●
154132	6387B001	PIXMA PRO-100 / 100S	●
154134	6388B001	PIXMA PRO-100 / 100S (FOTOGRAFICO)	●
154137	6391B001	PIXMA PRO-100 / 100S	●
300374	6431B001	PIXMA MG5450-5550/6350/7150	●
90735	6443B001	PIXMA MG5450, IP7250/MG6350, PIXMA MX925, MG5550/MG6450/ MG7150/iP8750/ iX6850/MG5650/ MG6650/MG7550	●
90737	6444B001	PIXMA MG5450, IP7250/MG6350, PIXMA MX925, MG5550/MG6450/ MG7150/iP8750/ iX6850/MG5650/ MG6650/MG7550	●
90736	6445B001	PIXMA MG5450, IP7250/MG6350, PIXMA MX925, MG5550/MG6450/ MG7150/iP8750/ iX6850/MG5650/ MG6650/MG7550	●
90723	6446B001	PIXMA MG5450, IP7250/MG6350, PIXMA MX925, MG5550/MG6450/ MG7150/iP8750/ iX6850/MG5650/ MG6650/MG7550	●
300377	6447B001	PIXMA IP7250 / MG5450 / MG6350	●
78040	6496B001	PIXMA MG 5450/IP7250/MG6350	●
78028	6508B001	PIXMA MG5450, IP7250/MG6350	●
154827	6509B008	551 C/M/Y/BK PIXMA IP8750 / iX6850 / MG5550 / MG6450 / MG7150 / MX725 / MX925	●●●●
38455	8190A002 *	i70/80, PIXMA iP90, PIXMA iP90v	●●
152008	8286B001	MG 2450 / 2550	●
77152	8287B001	PIXMA IP2850/ IP2855/MG2450/MG2550	●
156578	8287B006	PG-545 / CL-546 PIXMA MG2550 / MG3050 / TR4550 / TS205 / TS305 / TS3352	●
152009	8288B001	MG 2450 / 2550	●●●
77153	8289B001	PIXMA IP2850/ IP2855/MG2450/MG2550	●●●
152638	9218B001A	MB2050 / MB2150 / MB2155 / MB2350 / MB2750 / MB2755	●
152636	9193B001	MB2050 / MB2150 / MB2155 / MB2350 / MB2750 / MB2755	●
152637	9194B001	MB2050 / MB2150 / MB2155 / MB2350 / MB2750 / MB2755	●
152635	9195B001	MB2050 / MB2150 / MB2155 / MB2350 / MB2750 / MB2755	●
152763	9195B004	MB 2050 / 2150 / 2350 / 2750	●
154821	9254B001	PGI 2500 XL MAXIFY IB4050 / MB5050 / MB5155 / MB5350 / MB5450	●
159384	3713C001	560 PIXMA TS5350 / TS5351 / TS5352 / TS5353	●
159387	3730C001	560 PIXMA TS5350 / TS5351 / TS5352 / TS5353	●
159388	3713C006	560 PIXMA TS5350 / TS5351 / TS5352 / TS5353	●●●●
159385	3712C001	560 XL PIXMA TS5350 / TS5351 / TS5352 / TS5353	●
159389	3712C004	560 XL - 561 XL PIXMA TS5350 / TS5351 / TS5352 / TS5353	●●●●
159386	3731C001	561 PIXMA TS5350 / TS5351 / TS5352 / TS5353	●●●●
154290	1970C001	580 XXL PIXMA TR8550 / TS6250 / TS8250 / TS9150 / TS9550	●
154818	4529B010 *	PGI 525 PIXMA iP4950 / iX6550 / MG5350 / MG6150 / MG8150 / MX715 / MX885 / MX892	●●●
154565	2103C005	CLI 581 PIXMA TR8550 / TS6250 / TS8250 / TS9150 / TS9550	●●●●
154825	9267B001	PGI 2500 XL MAXIFY IB4050 / MB5050 / MB5150 / MB5155 / MB5350 / MB5450	●
154823	9265B001	PGI 2500 XL MAXIFY IB4050 / MB5050 / MB5150 / MB5155 / MB5350 / MB5450	●
154824	9266B001	PGI 2500 XL MAXIFY IB4050 / MB5050 / MB5150 / MB5155 / MB5350 / MB5450	●

*Pack de 2.

